



iriver[™] clix

Chapter 1

Getting Started

□ Components	4
□ Locating the Controls	5
□ LCD Display	6
□ Installing Software	7

Chapter 2

Basic Operations

□ Turning on/off the Player	10
□ iriver D-Click System™	11
□ Using HOLD	12
□ Connecting Products	13

Chapter 3

Using the iriver clix

□ Extras Recording	18
□ Extras Alarm Clock	19
□ Extras Flash Games	20
□ Extras Texts	21
□ Extras Browse Device	22
□ FM Radio	23
□ Now Playing	24
□ Music	25
□ Pictures	26
□ Videos	27
□ Playing Other Contents	28

Chapter 4

Setting up the iriver clix

□ Date & Time	30
□ Sounds	30
□ Display	30
□ Smart Key	30
□ Timer	31
□ Advanced	31
□ About	31

Chapter 5

Other Information

□ Using iriver plus 3	34
□ Using Windows Media Player 11	37
□ Copyrights/Certification/ Trademarks/Limited Liability	40
□ Safety Instructions	41
□ Troubleshooting	43

A decorative trail of white dots and small 'x' marks curves from the top-left corner towards the bottom-right corner, passing behind the text.

iriverTMclix


Chapter 1

Getting Started

Components	4
Locating the Controls	5
LCD Display	6
Installing Software	
Installing iriver plus 3	7
Installing Windows Media Player 11	7

Components

Components are subject to change without notice and may vary from images shown.

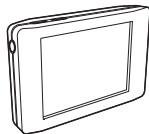

iriver clix



 
Earphones



Quick Start Guide & Warranty Card




Installation CD




USB Cable

Locating the Controls

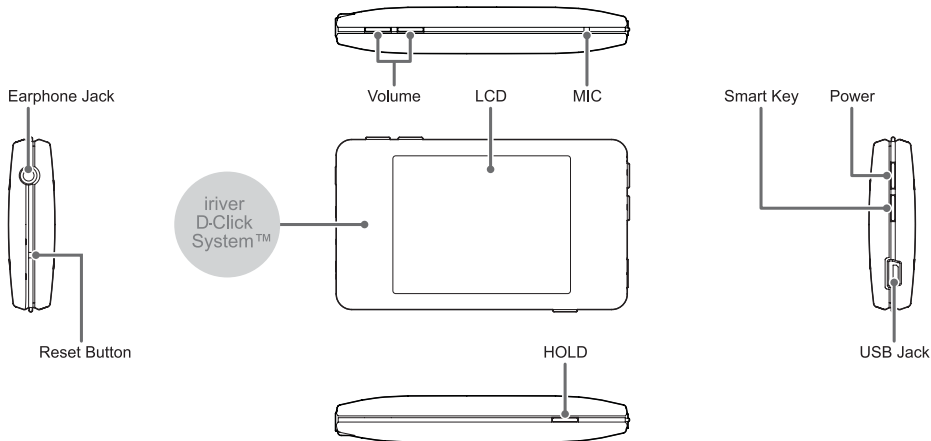


LCD Display


| While recording voice |

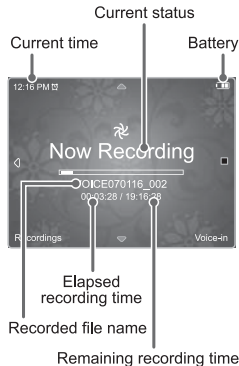

| While listening to FM Radio |

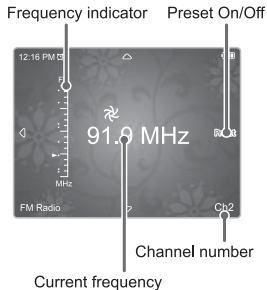

| While playing music |

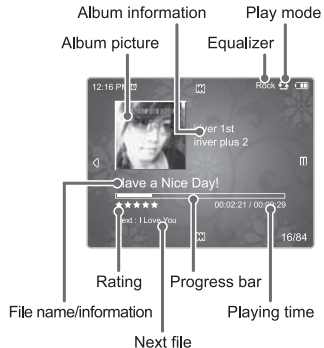



Installing Software

iriver plus 3 and Windows Media Player 11 are integrated programs that efficiently manage music and picture files. Using iriver plus 3 and Windows Media Player 11, you can save music and picture files from PC to the iriver cliX.

| Installing iriver plus 3 |.....

1. Insert the installation CD to your PC to display the installation process screen.
2. Select iriver plus 3 and click the [Install] button. Complete the installation process following the on-screen instructions.

Note

- Minimum requirements for using iriver plus 3
 - Intel® Pentium® II 233MHz or higher processor speed
 - Windows® 98 SE/ME/2000/XP
 - 64MB or above memory
 - 30MB or above hard disk space
 - Speaker and sound card which supports 16 bit
 - Microsoft Internet Explorer version 6.0 or later
 - SVGA or high resolution monitor (1024x768 resolution or higher)
- For more information on using iriver plus 3, refer to page 34 - 36.
- To connect the product to iriver plus 3, select [Settings > Advanced > Connection type] and set it to [MSC (UMS)].

| Installing Windows Media Player 11 |.....

1. Insert the installation CD to your PC to display the installation process screen.
2. Select Windows Media Player 11 and click the [Install] button. Complete the installation process following the on-screen instructions.

Note

- Minimum requirements for using Windows Media Player 11
 - Intel® Pentium® II 233MHz or higher processor speed
 - Windows® XP
 - 64MB or above memory
 - 30MB or above hard disk space
 - Speaker and sound card which supports 16 bit
 - Microsoft Internet Explorer version 6.0 or later
 - SVGA or high resolution monitor (1024x768 resolution or higher)
- For more information on using Windows Media Player 11, refer to page 37 -39.
- To connect the product to Windows Media Player 11, select [Settings > Advanced > Connection type] and set it to [MTP].

A decorative trail of white particles, including dots and small crosses, curves from the top-left corner towards the bottom-right corner, passing behind the text.

iriverTMclix

Chapter 2

Basic Operations

Turning on/off the Player	10
iriver D-Click System™	11
Using HOLD	12
Connecting Products	
Connecting earphones to the iriver clix	13
Charging the Battery	13
Connecting the iriver clix to your PC	14
Copying file/folder (Using as a removable disk)	15
Disconnecting the iriver clix from your PC	16



Turning on/off the Player

1. Press the [⏻] button on the product to turn it on.
2. Press and hold the [⏻] button on the product to turn it off.


Note

- This product has automatic power saving function to save battery power. Based on the setting of power saving mode, the product will be automatically turned off after designated period without operation. For more information on setting this mode, refer to [Settings > Timer > Auto Power off]. (Refer to page 31.)
- Based on this setting, the way to turn on the product and battery consumption rate will be changed. For more information on setting this mode, refer to [Settings > Advanced > Power Off Type]. (Refer to page 31.)
 - Sleep
 - When turn on the product, the last used function will be displayed.
 - The battery will be consumed slightly in this mode.
 - Power Off
 - When turn on the product, the main screen will be displayed. The booting time will be slightly taken to read all stored files.
 - The battery will not be consumed when powered off.

iriver D-Click System™

1. The iriver clx has an unique operating system named iriver D-Click System™. To operate the product, press down on the edge of the screen in one of four directions.

Up : Moves to the previous sub-menu.

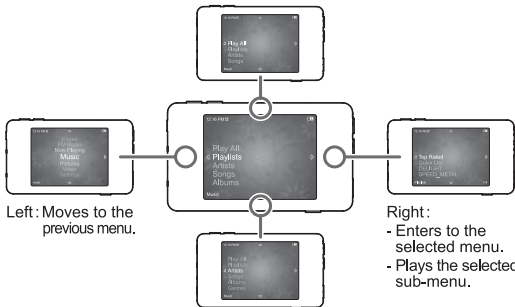


Down : Moves to the next sub-menu.

- Four arrows will be changed into different shapes based on the functions in each menu.
- Press and hold [LEFT] to return to the [Home] menu.
- In different menus, press and hold [RIGHT] to display the screen of current playing music.
- While playing file, press and hold [RIGHT] to display the additional features.

Using HOLD

1. Slide the HOLD switch to right to enable the HOLD function.

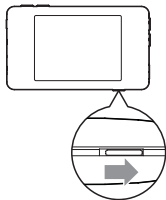

Connecting Products


| Connecting earphones to the iRiver cliX |

1. Connect the earphones to the jack of the product.



| Charging the Battery |

 1. Turn on your PC and connect the iRiver cliX to it using the USB cable.




Note

- While the product is connected to PC using the USB cable, the integrated battery is will be charged automatically.
- Do not use any other USB cable that is not provided with the product. It may case a malfunction.
- Check if the iRiver cliX is connected to a high-power USB 2.0 port. Some low-power USB ports built in some peripheral devices such as certain keyboards and USB hub without integrated power may not provide enough power to charge.
- While the PC is switched to standby mode, the product may not be charged.
- Charge the product only in room temperature. The product may not be charged in extremely hot and cold place.
- The available usage time of charged battery becomes gradually short after sometime.
- It will be fully charged within 2.5 hours. (Based on fully discharged and stop mode)
- If you use the player during charging process, the charging time might be extended.


Connecting Products

| Connecting the iRiver clx to your PC |

 1. Press the [⏻] button on the product to turn it on.
2. Turn on your PC and connect the iRiver clx to it using the USB cable.



3. If it is properly connected, the LCD will be shown as below.

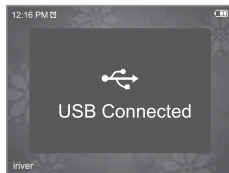


Connecting Products

| Copying file/folder (Using as a removable disk) |

Copying file/folder to the product

1. After selecting the file/folder in your PC, drag & drop it to the drive which appears as the product.

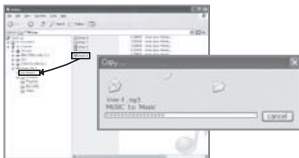

Deleting file/folder from the product

1. After selecting the file/folder, click it with the right mouse button and select [Delete].
2. Click [Yes] in the [Confirm File Delete/Confirm Folder Delete] popup window to delete the file/folder.




Note

- Always properly connect the USB cable.
- When you transfer data using the USB cable, never disconnect it or turn off the power to protect your data from damage.

Connecting Products

| Disconnecting the iRiver CLIX from your PC |

 1. Click the icon on the taskbar to disconnect the product using the "Safely Remove Hardware" menu.



2. Click the [Stop] button to confirm the disconnection.



Note

- The icon on the taskbar may be hidden in some operating systems. Click "Show hidden icons" to display the hidden icon.
- The "Safely Remove Hardware" may not be available while using some applications such as Windows Explorer or Windows Media Player. Close all applications first before performing the "Safely Remove Hardware".
- If the "Safely Remove Hardware" is not performed properly, try it after a few minutes.
- If [Settings > Advanced > Connection type] is set to [MTP], the "Safely Remove Hardware" popup message will not appear. Just ignore this message and disconnect the product from your PC.

Chapter 3

Using the iriver Clix

Extras Recording	
Recording	18
Additional Features	18
Extras Alarm Clock	
Set Alarm Time	19
Additional Features	19
Extras Flash Games	
Playing Flash Games	20
Extras Texts	
Selecting Text	21
Viewing Text	21
Additional Features	21
Extras Browse Device	
Browsing Device	22
Deleting file	22
FM Radio	
Listening to FM Radio	23
Scanning FM Radio Station	23
Additional Features	23

Now Playing	
Displaying Now Playing Music Screen	24
Music	
Selecting Music	25
Listening to Music	25
Additional Features	25
Pictures	
Selecting Picture	26
Viewing Picture	26
Additional Features	26
Videos	
Selecting Video	27
Watching Video	27
Additional Features	27
Playing Other Contents	
Playing Podcast File	28
Playing Audible File	28



Extras | Recording

| Recording |

1. Select [Extras-Recording] in the [Home] menu.
2. In Standby mode, press [RIGHT] to start recording and press it again to stop recording.

| Additional Features |

In Standby mode, press and hold [RIGHT] to display the additional features.

- **Saved Recordings** : Displays the list of recorded files.
Press [UP/DOWN] to select the file and press [RIGHT] to play it.
- **Voice Recording Quality** : Sets the quality of recorded voice.
- **Voice Detector** : Records voice only when sound can be detected.

Note

- You cannot control the volume while recording.
- If the remaining memory space or power is not enough, the recording will be automatically stopped.
- The recorded file will be saved in the Recordings/Voice folder as following format.
VOICEYYMMDD_XXX.MP3
(YY: Year, MM: Month, DD: Day, XXX: Sequential number)
- The file size per one minute varies by the recording quality.
Low: Approximately 250 KB Middle: Approximately 500 KB
High: Approximately 1 MB



Extras | Alarm Clock

| Set Alarm Time |

1. Select the [Extras-Alarm Clock] in the [Home] menu.
2. Press [RIGHT] to activate/deactivate alarm clock.

| Additional Features |

Press and hold [RIGHT] to display the additional features.

- Show Icons : Selects whether the icons will be displayed or not in the [Alarm Clock] menu.
- Set Alarm Time : Sets the time of alarm clock.
[RIGHT] - Switches between sub-menus.
[UP/DOWN] - Sets a sub-menu.
- Set Quick Alarm : Automatically turns on after designated time.
- Select Alarm Type : Selects the type of alarm to be operated.
- Alarm Volume : Sets the sound volume.
- Alarm Duration : Sets the duration of alarming sound.


Extras | Flash Games

You can play various contents and flash games.

| Playing Flash Games |

1. Select [Extras-Flash Games] in the [Home] menu.
2. In game list, press [UP/DOWN] to select the contents and press [RIGHT] to play a game.

3. Refer to the picture below to check the common key functions in flash games.

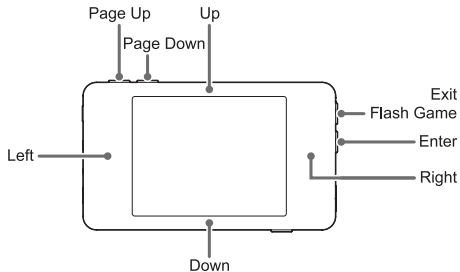

Note

- Key functions might be changed in some flash contents.
- If you start flash game while listening to music, music will stop and the flash game will be played.



Extras | Texts

You can read text file conveniently.

| Selecting Text |

1. Select [Extras-Texts] in the [Home] menu.
2. In text list, press [UP/DOWN] to select the file and press [RIGHT] to display the text file.

| Viewing text |

- Press [UP/DOWN] to scroll up or down.
- Press [RIGHT] to start or stop the automatic scroll function.
- Press [LEFT] to display the list of texts.
- If you stop viewing text, the last displayed page will be stored. (You can store 10 pages for latest 10 text files.)

| Additional Features |

While reading text, press and hold [RIGHT] to display the additional features.

- Show Icons : Selects whether the icons will be displayed or not in the [Texts] menu.
- Auto Scroll Speed : Sets the scroll speed.
- Text View Type : Selects amount to be scrolled when pressing [UP/DOWN].
- Font Size : Selects the size of font.
- Text Language : Selects the proper language for foreign text.

Note

- The automatic scroll will be deactivated when the [Text View Type] is set to [Percent].



Extras | Browse Device

You can manually check and play various media saved in the iRiver clix.

| Browsing Device |

1. Select [Extras-Browse Device] in the [Home] menu.
2. In file (folder) list, press [UP/DOWN] to select the previous/next file (folder).
3. Press [RIGHT] to move to a sub-folder of play the selected file.

| Deleting file |

1. After selecting the file, press and hold [RIGHT].

Note

- To play the file transferred by Windows Explorer (without using iRiver plus 3 or Windows Media Player 11), follow the steps below.
 - Music file
 - : In [Settings > Advanced > Music Browse Type], set the type to [File Tree] and browse the file in the [Music] menu.
 - : Browse and play the file in [Extras > Browse Device].
 - Picture file
 - : Browse and play the file in [Extras > Browse Device].

Note

- You cannot delete the file which is currently being played.



FM Radio

| Listening to FM Radio |.....

1. Select [FM Radio] from the [Home] menu.
2. Press [Up/Down] to select the broadcasting station.

| Scanning FM Radio Station |.....

- After deactivating Preset by pressing [RIGHT], press [UP/DOWN] to move to the previous/next frequency.
- After deactivating Preset by pressing [RIGHT], press and hold [UP/DOWN] to move to the available previous/next frequency.
- After activating Preset by pressing [RIGHT], press [UP/DOWN] to move to the previous/next preset radio station.

| Additional Features |.....

While listening to FM Radio, press and hold [RIGHT] to display the additional features.

- **Recordings** : Records the radio broadcasting which you are listening to.

| Additional Features |.....

- **Saved FM Recording** : Displays the list of recorded files. Press [UP/DOWN] to select the file and press [RIGHT] to play it.
- **FM Recording Quality** : Sets the recording quality of radio broadcasting.
- **Save Preset/Delete Preset** : Stores the current frequency to the channel. If the frequency is already stored, the existing channel will be deleted.
- **Stereo/Mono**: Switches the radio reception mode between Stereo and Mono.
- **Auto Preset**: Automatically scans and stores frequencies to the channels. Up to 30 channels can be stored.
- **Tuner Region**: Sets the frequency range based on local standard.
 - Korea/USA : 87.5~108.0MHz
 - Japan : 76.0~108.0MHz
 - Europe : 87.50~108.00MHz

Note

- You cannot control the volume while recording.
- If the remaining memory space or power is not enough, the recording will be automatically stopped.
- The recorded file will be saved in the Recordings/FM Radio folder as following format. TUNERYMMDD_XXX.MP3 (YY: Year, MM: Month, DD: Day, XXX: Sequential number)
- The file size per one minute varies by the recording quality.
Low: Approximately 250 KB Middle: Approximately 500 KB
High: Approximately 1 MB



Now Playing

| Displaying Now Playing Music Screen |

1. Select [Now Playing] in the [Home] menu.
2. The screen of currently playing music will be displayed.

Note

- You can display the same screen by pressing and holding [RIGHT] in the menu screen.



Music

| Selecting Music |

1. Select [Music] in the [Home] menu.
2. Press [UP/DOWN] to select the music file and press [RIGHT] to play it.

| Listening to Music |

- Press the [+/-] button to control the volume.
- While playing music, press [RIGHT] to pause/resume.
- While playing music, press and hold [UP/DOWN] to play fast forward or fast reverse.
- While playing music, press [UP/DOWN] to play the previous/next music.

Note

- Max. playtime : 24 hours (based on MP3, 128 Kbps, 44.1 KHz, Volume level 20, EQ Normal, LCD off)
- The browsed result will be changed based on the setting in [Settings > Advanced > Music Browse Type].
 - Database: Browses file by Playlists, Artists, Songs, Albums and Genres.
 - File Tree: Browses music file by folder.
- You can manage your playlist using iriver plus 3 or Windows Media Player 11.

| Additional Features |

While playing music, press and hold [RIGHT] to display the additional features.

- Play Mode: Selects the play mode which decides the playing order.
- Add to Quick List: Adds selected music to the Quick List.
- Select EQ: Selects the EQ to be used for playing music.
- Rate: Classifies your favorite music by star ratings.
- Buy: Purchases music file which is being played.
 - It only appears when [Settings > Advanced > Connection type] is set to [MTP].
 - When you connect the product to your PC, the payment can be made using Windows Media Player 11.
- Scan Speed: Sets the speed of fast forward and fast reverse.
- Playback Speed: Sets the speed of music playback.
- Lyric Display: Shows/hides lyric. It is available only when the music file contains lyric information.
 - ※ It only supports Korean.

Note

- If [Settings > Advanced > Music Browse Type] is set to [File Tree], [Add to Quick List] and [Rate] will not be displayed.



Pictures

| Selecting Picture |

1. Select [Pictures] in the [Home] menu.
2. Press [UP/DOWN] to browse picture using the Play All, Pictures Playlists or Pictures menu. If you select [Pictures], the thumbnails and brief descriptions of stored pictures will be displayed.
3. Select the file and press [RIGHT] to display the picture in full screen.

| Viewing Picture |

- While playing picture, press [RIGHT] to start/pause a slide show.
- While playing picture, press [UP/DOWN] to view the previous/next picture.

| Additional Features |

While viewing picture, press and hold [RIGHT] to display the additional features.

- Show Icons : Selects whether the icons will be displayed or not in Pictures screen.
- Image Delay : Selects the time each picture is displayed on the screen during a slide show.
- Slide Transitions : Selects the Fade effect during a slide show.
- Set As Wallpaper: Selects the image to be used as a wallpaper.



Videos

| Selecting Video |

1. Select [Videos] in the [Home] menu.
2. In video list, press [UP/DOWN] to select the file and press [RIGHT] to display the text file.

| Watching Video |

- Press the [+/-] button to control the volume.
- While playing video, press [RIGHT] to pause/resume.
- While playing video, press and hold [UP/DOWN] to play fast forward or fast reverse.

| Additional Features |

While playing video, press and hold [RIGHT] to display the additional features.

- Scan Speed : Sets the speed of fast forward and fast reverse.
- Resume : Selects whether the video is resumed from the last played point or from the beginning of a file when the player was stopped.
- Sequence Play : When there are files with related names, selects whether those are played with sequential order or not.

Note

- Max. playtime : 5 hours (based on avi, 320x240@15fps, video: 384 kbps, audio: MP3, 128 kbps, 44.1 KHz)
Max. play time can be changed based on video type.
- Video files should be transferred with iriver plus 3.
With any other programs, there might be troubles when playing the video files.



Playing Other Contents

| Playing Podcast File |

To play Podcast content, select [Settings > Advanced > Connection type] and set it to [MSC (UMS)].

What is Podcast?

Podcast is a brand new customizable personal media that user can download and enjoy favorite programs without waiting for broadcasting schedule. Podcast provides portable media player users with various kinds of audio and video files including news, dramas and other media contents. For more information, please visit <http://www.podcastready.com>.

Transferring Podcast file to the product

To transfer Podcast file to the product, you need to use Podcast Manager. Use the application with the Podcast icon on iriver plus 3.

Playing Podcast file

1. Select [Music > Podcast] in the [Home] menu.
2. Press [UP/DOWN] to select the downloaded audio file and press [RIGHT] to play it.

Recovering Podcast

If you format the product, all system files of Podcast will be deleted. To recover those files, use the [Recovering Podcast] menu.

1. After connecting the product to the USB jack of your PC using the USB cable, run iriver plus 3.
2. Select [Tools > Portable Device > Recovering Podcast] to start the recovery process.
3. When the recovery process is successfully completed, disconnect and reconnect the product from/to your PC. Now the Podcast icon is shown on the product.

| Playing Audible File |

To play Audible content, select [Settings > Advanced > Connection type] and set it to [MTP].

What is Audible?

A leading company in audio entertainment and educational programming, Audible provides various audio programs more than 80,000 cumulative hours. For more information, please visit <http://www.audible.com>.

Transferring Audible file to the product

To transfer Audible file to the product, you need to use Audible Manager. For more information, please visit <http://www.audible.com>.

Playing Audible file

1. Select [Music > Book Information] in the [Home] menu.
2. Press [UP/DOWN] to select the downloaded file and press [RIGHT] to play it.

Additional Features

While playing Audible file, press and hold [RIGHT] to display the additional features.

- Search Type : Selects the Search Type between [Section] and [Bookmark].
- Add Bookmark : Adds bookmark the favorite point.
- Delete Bookmark : Deletes current bookmark.
(To use both menus, you need to set Search Type to [Bookmark].)
- Playback Speed : Sets the speed of file playback.
- Book Information : Displays information of Audible file which is being played.

Chapter 4

Setting up the iriver clx

Date & Time	30	Smart Key	30	Advanced	31
Sounds	30	A-B Repeat	30	Language	31
Custom EQ	30	Home	30	Sort	31
SRS WOW HD	30	Play/Pause	30	Text Scroll Speed	31
Fade-In	30	Shuffle	30	Rebuild Library	31
Display	30	Display Orientation	30	Select USB Mode	31
Display Orientation	30	Start/Stop Recording	30	Format Device	31
Wallpaper	30	LCD On/Off	30	Music Browse Type	31
LCD Brightness	30	Timer	31	Connection Type	31
Theme	30	Auto Power off	31	Power Off Type	31
Font	30	Sleep	31	System Information	31
Save UCI	30	Backlight	31	Reset All Settings	31
				About	31



Setting up the iriver clix

The iriver clix supports customizable configurations.

The menu configurations are subject to change with different firmware versions.

| Date & Time |-----

- Date & Time : Sets the current time and date.
[RIGHT] - Switches between sub-menus.
[UP/DOWN] - Sets the sub-menu.

| Sounds |-----

- Custom EQ : Changes levels of each frequency range to create your own equalization.
- SRS WOW HD : Sets the levels of 3D sound effects.
 - SRS : Customizes SRS 3D sound effects.
 - TruBass : Customizes the bass sound level.
 - FOCUS : Sets the clarity of sound.
 - WOW : Sets the proper boost level by earphone model.
 - Definition : Recovers reduced sound to original level.
- Fade-In : Volume increases gradually when playback starts.

| Display |-----

- Display Orientation : Reverses the screen 90 degrees.
- Wallpaper : Configures wallpaper settings.
- LCD Brightness : Changes the brightness of display.
- Theme : Selects a screen saver.
- Font : Changes the font to be displayed.
*To support proper recovery, set [Advanced > Select USB Mode] to [Power & Data] when you set up the theme and font.
- Save UCI : Save the change of the font and/or the theme.

| Smart Key |-----

Configures function to be assigned to the Smart Key.

- A-B Repeat : Plays between point A and B repeatedly.
- Home : Returns to [Home] menu while operating the product.
- Play/Pause : Plays/pauses music or video file.
- Shuffle : Plays music file randomly.
- Display Orientation : Reverses the screen 90 degrees.
- Start/Stop Recording : Starts/stops recording.
- LCD On/Off : Turns on or off the display.



Setting up the iriver clix

| Timer |

- Auto Power Off : Automatically turns the power off after designated time without operation.
- Sleep : Automatically turns off after designated time.
- Backlight : Sets the time that the backlight is turned on.

| Advanced |

- Language : Selects the language for your convenience.
- Sort : Determines the order of files.
- Text Scroll Speed : Sets the scroll speed of characters when file information is too long to display at one time.
- Rebuild Library : Creates the database of music file.
- Select USB Mode : Selects the USB connection type to your PC.
 - Power & Data : When the USB connection is made, the product is also connected to PC.
 - Power & Play : When the USB connection is made, the [Connect USB] message will be displayed in [Home] menu. Select [Connect USB] and press [RIGHT] to connect the product to your PC.
- Format Device : Deletes all data in the product.
- Music Browse Type : Selects the type for browsing music.
 - Database : Using ID3, TAG or Playlist function, browse music files transferred by applications (iriver plus 3, Windows Media Player 11).

| Advanced |

- File Tree : Browses music files transferred by Windows Explorer.
 - *The default browse type is set to [Database].
- Connection Type : Selects the type for transferring file to PC.
 - * **Be careful not to delete valuable data because changing [Connection Type] will delete all data in the product.**
 - MSC (UMS) : Using iriver plus 3, transfers file with the MSC connection type.
 - * **Mass Storage Class (MSC) is a traditional UMS type.**
 - MTP : Using Windows Media Player 11, transfers file with the MTP connection type.
- Power Off Type : Selects the type for turning off the player.
 - Sleep : When turn on the product, the last used function will be displayed.
 - Power Off : When turn on the product, the main screen will be displayed. The warming up time will be slightly taken to read all stored files.
- System Information : Displays system information of the product.
- Reset All Settings : Resets the product to the factory setting.

| About |

- About : Displays information of the product.

A decorative trail of white dots and small star-like shapes curves from the top-left corner towards the bottom-right corner, passing behind the text.

iriverTMclix

Chapter 5

Other Information

Using iriver plus 3		Copyrights/Certification/ Trademarks/Limited Liability	40
Adding Media to Library	34	Safety Instructions	
Ripping Songs from a CD	34	Product Safety	41
Transferring Media to the iriver clix		Other important things to remember	42
Using iriver plus 3	35	Troubleshooting	
Using Windows Explorer	35	Please check out!	43
Initializing Disk	36		
Upgrading Firmware	36		
Using Windows Media Player 11			
Adding Media to Library	37		
Ripping Songs from a CD	37		
Transferring Media to the iriver clix	38		
Initializing Disk	39		
Upgrading Firmware	39		



Using iriver plus 3

To connect the product to iriver plus 3, select [Settings > Advanced > Connection type] and set it to [MSC (UMS)].

| Adding Media to Library |

1. When you run iriver plus 3 for the first time, the Add Media Wizard will start.
2. Follow the on-screen instructions on the PC to add media files such as music and picture to the library.

| Ripping Songs from a CD |

1. Insert an audio CD into the CD drive and run iriver plus 3.
2. In iriver plus 3, select the checkbox from [Music >CD Drive] and click [CD Ripping] in bottom left.
3. After ripping song, select the [All Music] to check whether the ripped song is added to the library.

Using iriver plus 3

| Transferring Media to the iriver clix |

Using iriver plus 3

1. After connecting the product to the USB jack of your PC using the USB cable, run iriver plus 3.
2. Select the checkbox beside the file to transfer and click [OK].
3. The selected file starts to transfer and the progress status is displayed in the Status window on bottom left.
4. Now you can find the selected music in your library.

Using Windows Explorer

1. Connect the product to the USB jack of your PC using the USB cable.
2. Copy the contents to proper folders as below.
 - Text : iriver clix/Text
 - Music : iriver clix/Music
 - Picture : iriver clix/Pictures
 - Video : iriver clix/Video

Note

- The supported file formats are listed below.

Type	Extension	Format		Type	Extension	Format	
Flash	SWF	Flash file type	Adobe Flash Lite 2.1	Picture	JPG	Baseline JPG (Progressive JPG is not supported.)	
Game		Frame rate	Less than 15 frames/sec.	Video	AVI	Video	MPEG4 SP(Simple Profile), Less than 30 frames/sec. 2Mbps
		Audio	ADPCM or MP3 128kbps, Less than 44.1 KHz			Resolution	QVGA(320X240)
						Audio	Supports MP3 up to 320 Kbps, 44.1 KHz is recommended, CBR
Text	TXT	Unicode text, Local code text			WMV	Video	WMV9 SP, Less than 30 frames/sec. 768 Kbps
Music	MP3, WMA	8~320Kbps				Resolution	QVGA(320X240)
	OGG	Q1~Q10				Audio	Supports WMA up to 320 Kbps



Using iRiver plus 3

| Initializing Disk |

1. After connecting the product to the USB jack of your PC using the USB cable, run iRiver plus 3.
2. Select [Tools > Portable Device > Initialize Disk] and click [Start] when the message to confirm initialization appears.
3. The initialization process is completed and the product is disconnected from your PC.

Note

- You need to backup the necessary files before initialization as formatted files cannot be recovered.

| Upgrading Firmware |

1. After connecting the product to the USB jack of your PC using the USB cable, run iRiver plus. The PC should be connected to internet.
2. Select [Tools > Portable Device > Firmware Upgrade] and complete the upgrade process following the on-screen instructions.

Note

- Do not disconnect the product from PC while downloading firmware upgrade file. After the download is completed, disconnect the cable to activate the firmware upgrade.
- If the already installed firmware is the latest version, the message to confirm latest version appears.
- When connect the product to your PC, if there is latest firmware, the instruction message appears automatically.



Using Windows Media Player 11

To connect the product to Windows Media Player 11, select [Settings > Advanced > Connection type] and set it to [MTP].

| Adding Media to Library |.....

1. When you run Windows Media Player 11 for the first time, the Add Media Wizard will start.
2. Follow the on-screen instructions on the PC to add media files such as music and picture to the library.

| Ripping Songs from a CD |.....

1. Insert an audio CD into the CD drive and run Windows Media Player 11.
2. Select the [Ripping] tab from Windows Media Player 11. Select the checkbox beside music to rip and click the [Start Ripping] in bottom left.
3. The ripped music will be stored in [My Documents > My Music] and automatically added to library.



Using Windows Media Player 11

| Transferring Media to the iriver clix |

1. After connecting the product to the USB jack of our PC using the USB cable, run Windows Media player 11.
2. After selecting the file in your PC, drag & drop it to the right pane.
3. Click [Start Synchronizing] to start transferring file.
4. Now you can find the selected music in your library.

Note

- The supported file formats are listed below.

Type	Extension	Format		Type	Extension	Format	
Flash	SWF	Flash file type	Adobe Flash Lite 2.1	Picture	JPG	Baseline JPG (Progressive JPG is not supported.)	
Game		Frame rate	Less than 15 frames/sec.	Video	AVI	Video	MPEG4 SP(Simple Profile), Less than 30 frames/sec. 2Mbps
		Audio	ADPCM or MP3 128kbps, Less than 44.1 KHz			Resolution	QVGA(320X240)
						Audio	Supports MP3 up to 320 Kbps, 44.1 KHz is recommended, CBR
Text	TXT	Unicode text, Local code text			WMV	Video	WMV9 SP, Less than 30 frames/sec. 768 Kbps
Music	MP3, WMA	8~320Kbps				Resolution	QVGA(320X240)
	OGG	Q1~Q10				Audio	Supports WMA up to 320 Kbps



Using Windows Media Player 11

| Initializing Disk |.....

1. After connecting the product to the USB jack of your PC using the USB cable, run Windows Media player 11.
2. After selecting [iriver clix], click the right mouse button and select [Format]. Click [OK] when the message to confirm initialization appears.
3. The initialization process is completed and the product is disconnected from your PC.

Note

- You need to backup the necessary files before initialization as formatted files cannot be recovered.

| Upgrading Firmware |.....

1. After connecting the product to the USB jack of your PC using the USB cable, visit iriver web-site to download new firmware upgrade file.
2. Copy the file to the iriver clix and disconnect the cable to activate the upgrade process.

Note

- Do not disconnect the product from PC while copying firmware upgrade file.
- When you are using Windows Media Player 11, use [iriverFirmwareUPdater] in the installation CD for more convenient firmware upgrade.



Copyrights/Certification/Trademarks/Limited Liability

| Copyrights |

iriver Limited has all the rights of the patent, trademark, literary property and intellectual property related to this manual. You may not copy or reproduce any part of this manual unless authorized by iriver Limited.

You can be punished by using any part of this manual illegally. The software, audio and video which have an intellectual property are protected by copyright and international laws.

It is user's responsibilities when he/she reproduce or distribute the contents created by this product.

The companies, institutions, products, people and events used in examples are not real data.

We don't have any intension to be related with any companies, institutions, products, people and events through this manual and should not draw inferences.

Users are responsible for observing the copyrights and intellectual properties.

©1999~2007 iriver Limited. All rights reserved.

| Certification |

MIC, FCC, CE

| Trademarks |

Windows 98 SE/ME, Windows 2000, Windows XP, Microsoft, Windows and Windows Media are either registered trademarks or trademark of Microsoft Corporation in the United States and/or other countries.



is a trademark of SRS Labs, Inc.

WOW technology is incorporated under license from SRS Labs, Inc.

| Limited Liability |

Neither the Manufacturer, importers nor dealers is responsible for any accidental damage including bodily injury or any damage resulting from misuse or unsuitable operation by you.

The information on this manual is prepared with the current player specifications.

The manufacturer, iriver Limited, is adding new features to the product and may persistently apply new technologies hereafter.

All standards may be changed at any time without notice.



Safety Instructions

| Product Safety |

- If you display still image for a long time, a ghost image might be appeared.
- Do not place objects inside the device other than CD's.
It may cause malfunction.
- Do not place heavy objects on the player.
It may cause damage and malfunction.
- Do not dampen your player with rain (water), beverage, chemicals, cosmetics and so on.
It may cause damage and malfunction.
- Keep away from harsh environments including humid, dusty, and smoky areas.
It may cause malfunction.
- Keep out of direct sunlight and extreme heat and cold.
It may cause malfunction.
- Do not keep the product close to magnetic substance such as magnet, TV, monitor and speaker.
It may cause malfunction.
- Never dismantle, repair, or rebuild your player without permission.
It may cause damage and malfunction.
- Do not clean with chemical or detergent.
It may cause malfunction.
- Do not drop or subject the device to impact.
It may cause damage and malfunction.
- Do not press more than two buttons altogether.
It may cause damage and malfunction.
- Do not disconnect the USB cable while transferring data.
It may cause malfunction.



Safety Instructions

| Other important things to remember |

- Do not use headphones / earphones while cycling, driving, or operating any motorized vehicle.
It is dangerous and is illegal in some areas.
- Reduce volume or stop using the player if you experience a ringing in your ears.
It may cause injury.
- Reduce volume while walking, especially at pedestrian crosswalks.
It may cause injury.
- Do not listen to music via headphone/earphone with high volume for a long time.
It may cause injury.
- Do not use headphone / earphones at high volume.
It may cause injury.
- Keep headphone-/earphone cords under control to avoid getting caught on nearby objects.
It may cause injury.
- Do not sleep with headphones / earphones in the ears.
Do not use headphones / earphones for excessive periods of time.
It may cause injury.
- Try to connect the product to the rear USB port in your PC.
In some individually assembled PCs, improper USB port may cause malfunction.



Troubleshooting

| Please check out! |

- The player will not power on!
 - Check whether the battery is discharged. Charge the product using USB cable and check it again.
 - Insert a thin and pointed object (such as a straightened paper clip) into the reset hole to reset the device.
- The product cannot be charged after connecting power.
 - Check whether the USB cable is firmly connected.
- The product cannot be connected properly using the USB cable.
 - Check whether the USB cable is firmly connected.
- The LCD display is turned off frequently.
 - To save power consumption, the LCD is designed to be turned off after designated time.
Set up the duration in [Settings > Timer > Backlight].
- Poor radio reception with heavy noise!
 - Check whether an earphone is connected. (The earphones cord functions as an antenna.)
 - Adjust the position of the player and earphones.
 - Turn off any nearby electronic equipment to avoid potential interference.
- No sound during playback!
 - Check whether the volume is set to "0".
 - Check whether the plug or connection jack of earphones is dirty.
 - Check whether the music file is corrupted.
- The memory space is changed after formatting.
 - The memory space can be changed depending on the operating system.
- Windows Media Player 11 cannot be installed.
 - Check whether you are currently using Windows® XP. Windows Media Player 11 only supports Windows® XP. If you are using other than Windows® XP, transfer files using iRiver plus 3 or removable disk.

Federal Communications Commission (FCC)

- **Caution :**

Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- This device complies with part 15 of the FCC Rules.

- Operation is subject to the following two Conditions :

- (1) This device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
- for compliance could void the user's authority to operate the equipment.

Note

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.